# **HearthRite**

Radiant and Blue Flame Vent-Free Gas Heaters



Radiant Vent-Free Gas Heater

Blue Flame Vent-Free Gas Heater



Intelligent Design • Exceptional Value

#### **Radiant Heat**



Think cat on a windowsill! Our radiant heaters project warmth into the room like sunlight through a window. Ideal for any supplemental heat application.

### **Blue Flame Heat**

Think warm tropical breeze! Our blue flame heaters warm the air, which rises to create natural circulation in the room.







Choose manual or thermostat control

**Blower** 



Floor Stand

- 99.9% Efficiency Turns more gas into heat
- Available in LP or Natural gas
- Pushbutton piezo ignition and standing pilot
- Heats even when electric power fails
- Oxygen Depletion Sensor shuts off heater before oxygen drops to unsafe levels
- Every heater is test-fired at the factory to check Oxygen Depletion Sensor
- Wall-mount or floor stand
- Three-year limited warranty on parts and labor

### **Radiant Gas Heaters**

Model	Btu	Natural/LP	Controls	Dimensions (H x W x D)	Weight (lb)
HR06MN	6,000	Nat	Manual, on/off	19 1/4 x 14 1/4 x 7	12
HR06ML	6,000	LP	Manual, on/off	19 1/4 x 14 1/4 x 7	12
HR10MN	10,000	Nat	Manual, 2-Settings	19 1/4 x 14 1/4 x 7	13
HR10ML	10,000	LP	Manual, 2-Settings	19 1/4 x 14 1/4 x 7	13
HR18MN	18,000	Nat	Manual, 3-Settings	23 1/4 x 19 1/4 x 8	23
HR15ML	15,000	LP	Manual, 3-Settings	23 1/4 x 19 1/4 x 8	23
HR30MN	30,000	Nat	Manual, 3-Settings	23 1/4 x 26 3/4 x 8	30
HR25ML	25,000	LP	Manual, 3-Settings	23 1/4 x 26 3/4 x 8	30
HR10TN	10,000	Nat	Thermostat	19 1/4 x 14 1/4 x 7	13
HR10TL	10,000	LP	Thermostat	19 1/4 x 14 1/4 x 7	13
HR18TN	18,000	Nat	Thermostat	23 1/4 x 19 1/4 x 8	24
HR15TL	15,000	LP	Thermostat	23 1/4 x 19 1/4 x 8	24
HR30TN	30,000	Nat	Thermostat	23 1/4 x 26 3/4 x 8	31
HR25TL	25,000	LP	Thermostat	23 1/4 x 26 3/4 x 8	31

#### **Blue Flame Gas Heaters**

Model	Btu	Natural/LP	Controls	Dimensions (H x W x D)	Weight (lb)
HB06MN	6,000	Nat	Manual, on/off	19 1/4 x 14 1/4 x 7	12
HB06ML	6,000	LP	Manual, on/off	19 1/4 x 14 1/4 x 7	12
HB10MN	10,000	Nat	Manual 2-Settings	19 1/4 x 14 1/4 x 7	13
HB10ML	10,000	LP	Manual 2-Settings	19 1/4 x 14 1/4 x 7	13
HB20MN	20,000	Nat	Manual 3-Settings	23 1/4 x 19 3/4 x 8	21
HB20ML	20,000	LP	Manual 3-Settings	23 1/4 x 19 3/4 x 8	21
HB30MN	30,000	Nat	Manual 3-Settings	23 1/4 x 26 3/4 x 8	26
HB30ML	30,000	LP	Manual 3-Settings	23 1/4 x 26 3/4 x 8	26
HB10TN	10,000	Nat	Thermostat	19 1/4 x 14 1/4 x 7	14
HB10TL	10,000	LP	Thermostat	19 1/4 x 14 1/4 x 7	14
HB20TN	20,000	Nat	Thermostat	23 1/4 x 19 1/4 x 8	23
HB20TL	20,000	LP	Thermostat	23 1/4 x 19 1/4 x 8	23
HB30TN	30,000	Nat	Thermostat	23 1/4 x 26 3/4 x 8	33
HB30TL	30,000	LP	Thermostat	23 1/4 x 26 3/4 x 8	33
Accessories					

HAB01	Blower - Thermostat and	HAS01	Floor Stand for HR06/HB06 and HR10/HB10 Models
	Manual Control	HAS02	Floor Stand or HR25/HB20 and HR30/HB30 Models

All Parts carry a 3-year limited warranty with a 3-year limited labor warranty

HearthRite is committed to continuous product improvement. Specifications are subject to change without notice.

Empire Comfort Systems is committed to continuous product improvement; specifications are subject to change without notice. Flame size, shape, and color will vary from photos.

Due to high temperatures, the appliance should be located out of traffic and  $% \left( 1\right) =\left( 1\right) \left( 1$ away from furniture and draperies.

Children and adults should be alerted to the hazard of high surface temperature and should be kept away to avoid burns or clothing ignition.

Installation and repair should be done by a qualified service person.

When used without adequate combustion and ventilation air, heater may give off CARBON MONOXIDE, an odorless, poisonous gas.

These heaters have a pilot light safety system that turns the heater off if not enough fresh air is available. Do not tamper with this safety system. If the heater shuts off, do not re-light until you provide fresh air. If the heater keeps shutting off, have it serviced. Keep the burner and control compartment clean.

Carbon monoxide poisoning may lead to death. Early signs of carbon monoxide poisoning resemble the flu, with headache, dizziness, and/or nausea. If you have these signs, the heater may not be working properly. Get fresh air at once and have the heater serviced.

Some people-pregnant women, persons with heart or lung disease, anemia, those under the influence of alcohol, those at high altitudes—are more affected by carbon monoxide than others.

These heaters are design certified in accordance with American National Standards Institute Z21.11.2a (latest standard) by the Canadian Standards Association as Unvented Room Heaters.

The installation must conform to local codes. In the absence of local codes, the installation must conform with American National Standard (National Fuel Gas Code) known as NFPA 54 and ANSI Z223.1 (latest edition) available from the American National Standards Institute, Inc., 11 West 42nd St., New York, N.Y. 10036, or from the National Fire Protection Association, Batterymarch Park, Quincy, Massachusetts 02269.

## HearthRite

A Division of Empire Comfort Systems Inc. 918 Freeburg Avenue Belleville, IL 62220 info@empirecomfort.com









